
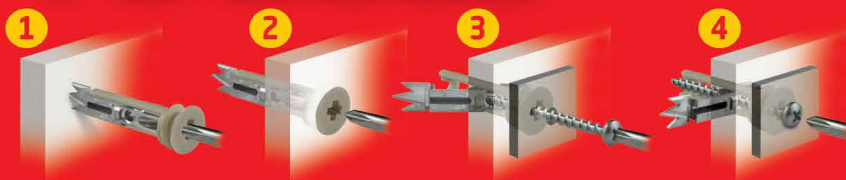


# TOGGLEBITE

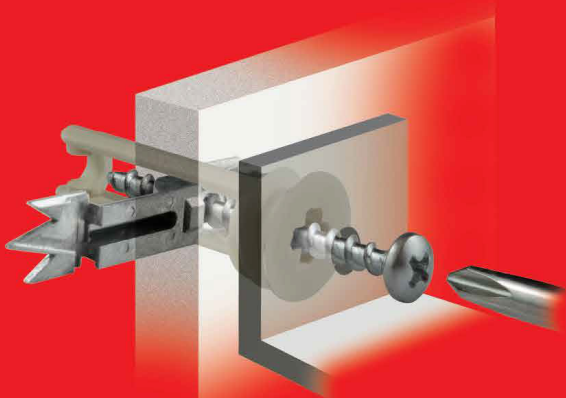


1. Insert the point of a #2 Phillips Head screwdriver into the recess of the ICCONS TOGGLE BITE, place the drill point against the wall to lightly pierce the plasterboard.

2. Screw TOGGLE BITE into the plasterboard until the head is flush with the surface.

3. Position fixture, insert screw, turn screw to engage the toggle behind the wall.

4. Continue to turn the screw until the fixture is pulled against the plasterboard.

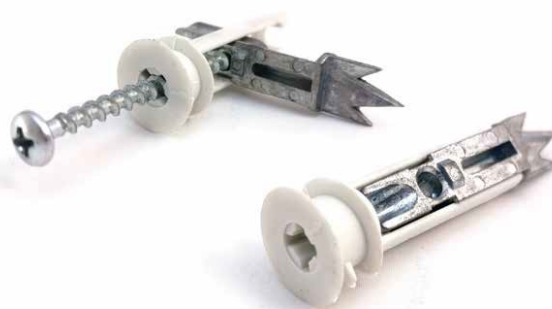

## Toggle-Bites - With Screw

Drill Point Nylon / Alloy Toggle-Bite

Unique Drill Point for easy, clean and precise installs.

ICCONS® TOGGLE BITE features a movable alloy toggle that allows the anchor to clamp the plasterboard for added strength.

- Self drilling anchor for heavy duty, vibration resistant plasterboard fixing.
- Ideal for fixing shelving brackets, mirrors, cabinets, curtain rods, pictures, fire extinguishers, hanging plants, lighting fixtures, coat hooks, etc. into plasterboard.
- Can be used for wall or ceiling mounts.
- Maximum recommended load - Plasterboard 20KG



NYLON

Part No.	Description	⊕	📦 Hang Pack	📦 Counter display
PBTBNYLON-WS	Self drilling wall toggle for plasterboard with pan head screw	Ph2	25pce	500 (20 x 25pce)