


Installation Instructions for CH-2065

1. Loop cable tie around bundle and side entry for positioning in tool.
2. Squeeze handles as many times as necessary to tighten tie to the desired tension.
3. Maintain final handle pressure and rotate cutter bar up, until excess cut-off tail.

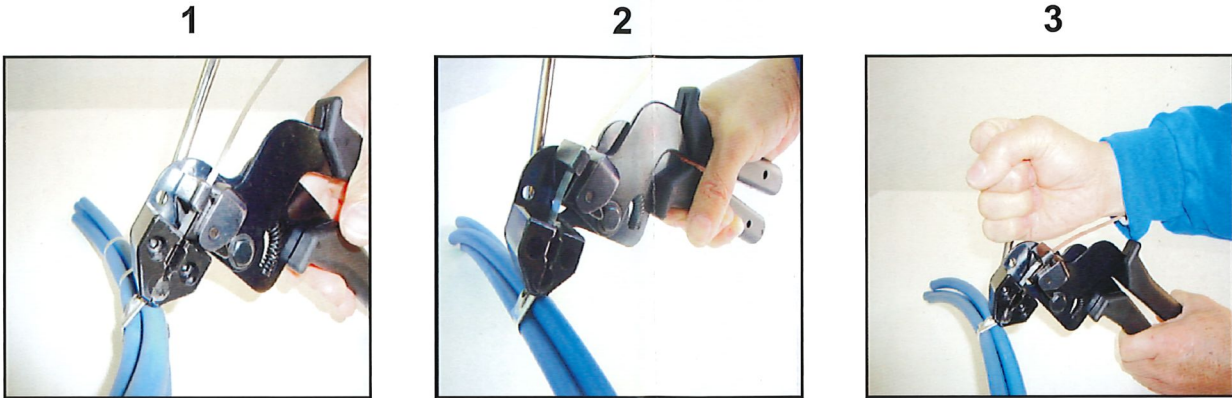

EXPLODED VIEW

